




SERVICE INSTRUCTIONS

TOOLS REQUIRED


- SCREWDRIVER
- HIGH QUALITY MULTI-PURPOSE GREASE
- PLIERS

IMPORTANT:


- CHECK THAT **GUARD MISSING** DECAL ON STEEL TUBE UNDER INNER GUARD AND **ROTATING DRIVELINE** DECAL ON OUTER GUARD ARE FIRMLY AFFIXED, UNDAMAGED AND READABLE - **IF NOT, REPLACE**

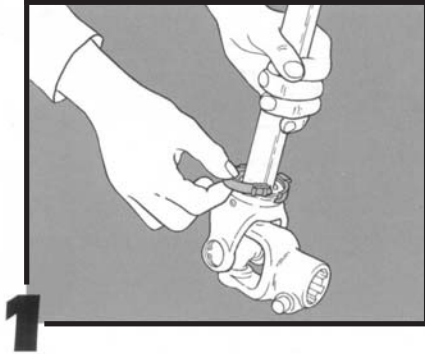


1 Clean and grease bushing groove before the bushing is placed in the groove. Grease any remaining bushings in guard.

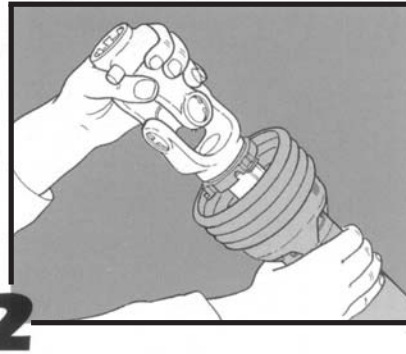

2 Slide guard half over driveline and insert bushing tabs into the openings in the guard.

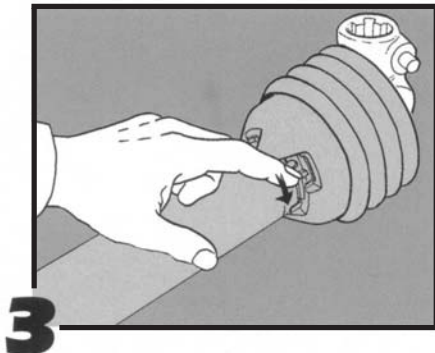

3 Turn the bushing until it engages into the guard.

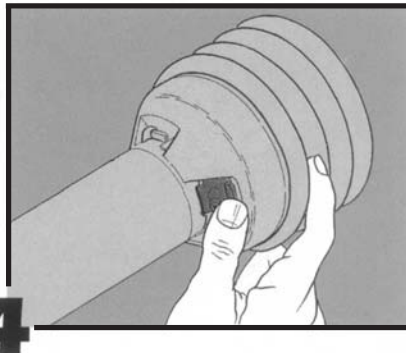

4 Push *Easy Lock* clip into position. The bushing and guard are now secure.

5 **TO REMOVE GUARD** - Use screwdriver to release *Easy Lock* clip. Turn the bushing to disengage from the guard and remove guard.

